



RELEASED
(14/1/99 SL)

PPP

Part Number	D350-567-111	Box Part Number	BX20	Dimension	L x W x H 50 x 20 x 8
Description	Floor Window Installation, Extra Large	Other Packaging	Uline S4922		DT8439
		Logo Decals			

Packaging Instructions and Decal Placement

D350-567-111


*****Check the DT8439 template tube to make sure the template is inside.*****

****Apply label D2729-4 to part number D3296-041*****

Apply label D2729-4 & D2728-1 as per drawings below.


Put bubble wrap on bottom of box. Put each kit (D350-567-113 & D350-567-115) in big plastic bags and place a label D2729-3 on each bag identifying the two kits. Wrap each kit in bubble wrap and seal with Dart tape.

Check the DT8439 template tube to make sure the template is inside. Place window in first, then add template DT8439 down the side of the box. Add remaining parts & paperwork. Add more bubble wrap to loose spaces to prevent any movement. Seal box and apply label D2729-3 as per instructions in QSI 014.

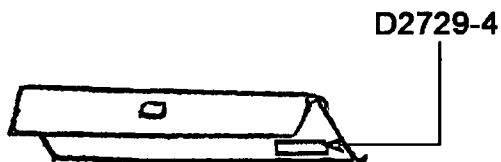

D3296-041 Door Assembly

(another view)

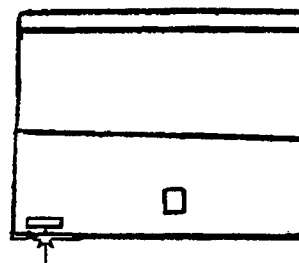

D2728-1

D2729-4

D2729-3

DART			
PART NO	N/A	CHG	CHG007
P/N	D350-567-111	SPC	SH92-18
QTY	Floor Window, Extra Large	SPC	SH989NE
QTY	BXXXXXX	SPC	SH990NE
QTY	AS350/355	SPC	



Dart Aerospace Ltd.
1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL.: 1 613 632-5200

FLOOR WINDOW, EXTRA LARGE

P/N: D350-567-111

CHG007

B/N: BXXXXXX

Revision: K
Date: 16.04.20

DAS
16
9-89

2016/04/21